


INSTALLATION INSTRUCTIONS

ACE LED HIGH BAY TROFFER (AT20H)

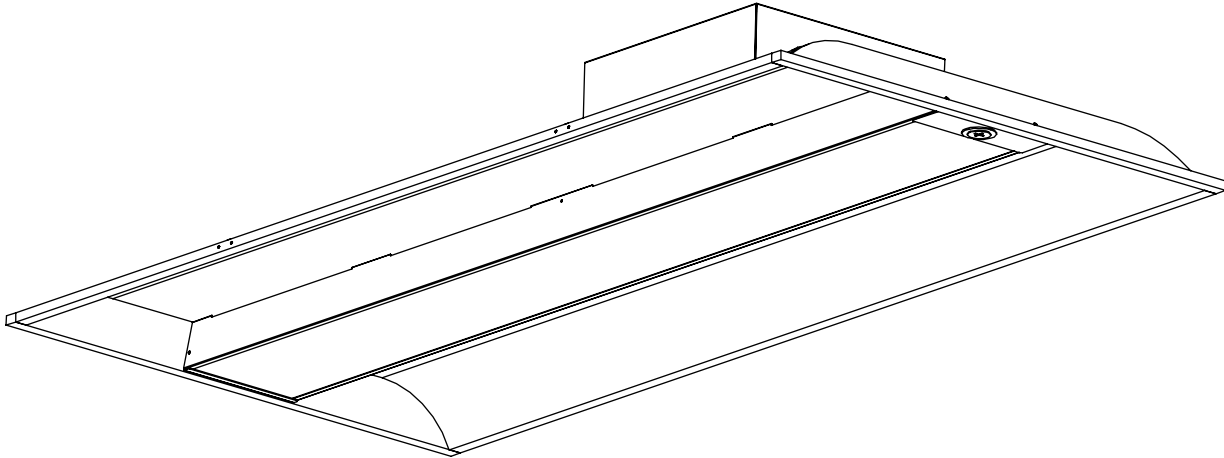

READ CAREFULLY BEFORE INSTALLING THE FIXTURE.
PLEASE KEEP THIS MANUAL FOR FUTURE USE.

IMPORTANT SAFEGUARDS

Read and follow all safety instructions

- **CAUTION** - Connect the fixture to a 120/277V or 347/480V, 50/60Hz power source. Any other connection voids the warranty.
- **WARNING** - To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.
- **WARNING** - Wear gloves when handling the fixture as edges are sharp.
- Do not make or alter any open holes in an enclosure of wiring or electrical components during installation.
- This luminaire is suitable for Damp locations. Prior to installation, review all environmental designation locations in the product spec sheet. Only install in damp locations if so indicated in the spec sheet.
- For dimming or lighting controls, use provided wiring diagram only.

For any questions regarding wiring, installation, or use of this fixture, please call 559-485-6010 or email techsupport@linmoreled.com



WARNING

Risk of Fire or Electric Shock


- Before installation or servicing, turn the power OFF at the circuit breaker or fuse. Place tape over the circuit breaker switch and verify power is OFF at the light fixture.
- Ground the fixture to avoid potential electric shock.
- Do not handle energized module with wet hands or when standing on wet or damp surfaces, or in water.
- Luminaire wiring and electrical parts may be damaged when drilling for installation of LED troffer. Check for enclosed wiring and components.
- This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
- This product installation requires knowledge of luminaires electrical systems. If not qualified, do not attempt installation. Contact a qualified electrician.

TECHNICAL SPECS

Part No.	Watts	CCT	CRI	Input Voltage	PF	Dimmable	Warranty
AT20H-A2-06K-14-xx-80-FR-yy-GRID-EZ40-10V	45W	xx=50 5000K xx=40 4000K xx=35 3500K	≥0.9	yy = LV 120-277VAC yy = HV 347-480VAC	≥0.9	0-10V	5 Years
AT20H-A2-14K-14-xx-80-FR-yy-GRID-EZ40-10V	104W						
AT20H-A2-18K-14-xx-80-FR-yy-GRID-EZ40-10V	110W						
AT20H-A2-06K-22-xx-80-FR-yy-GRID-EZ40-10V	45W						
AT20H-A2-14K-22-xx-80-FR-yy-GRID-EZ40-10V	104W						
AT20H-A2-18K-22-xx-80-FR-yy-GRID-EZ40-10V	110W						
AT20H-A2-12K-24-xx-80-FR-yy-GRID-EZ40-10V	88W						
AT20H-A2-28K-24-xx-80-FR-yy-GRID-EZ40-10V	210W						
AT20H-A2-36K-24-xx-80-FR-yy-GRID-EZ40-10V	220W						

Ambient range operation: -20°C up to 50°C (-4°F up to 122°F)

DIMENSIONS

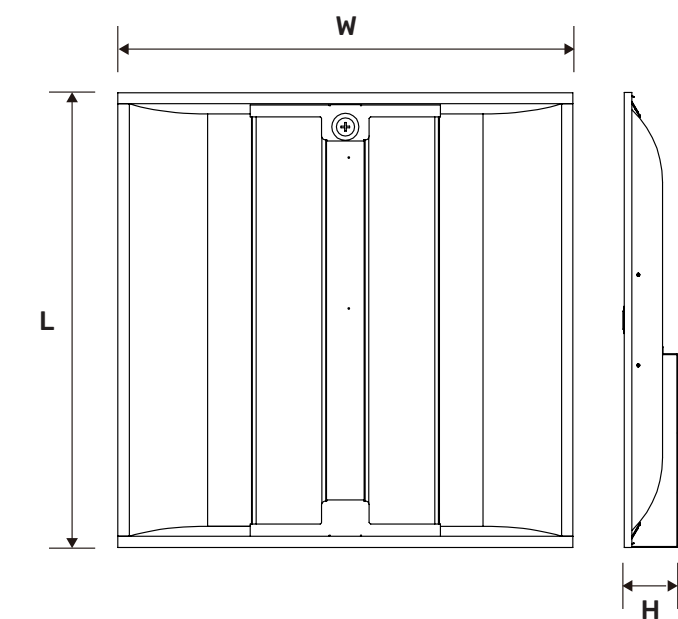


Size	L	W	H
1x4	47.76"	11.89"	3.76"
2x2	23.74"	23.74"	2.80"
2x4	47.76"	23.74"	2.80"


Dimension tolerances: ± 0.1".

INSTALLATION GUIDE

SUPPLIED COMPONENTS

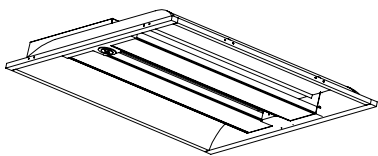

1x Fixture




3x AA Wire Nuts




2x BB Wire Nuts

INSTALLATION

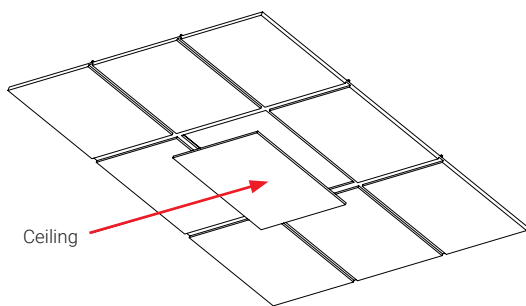1**STEP 1**

- Locate desired fixture location in ceiling grid.
- Remove existing ceiling panel at chosen location.
- Remove adjacent ceiling panel to allow for wiring access from above.

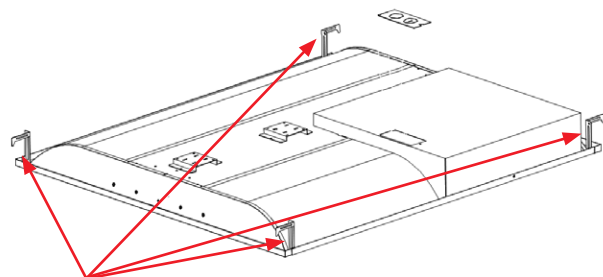
2

T-Bar clips bent up and rotated out to engage T-bar


STEP 2

- Place fixture into T-bar ceiling grid.
- Bend clips on top of fixture up and rotate out to engage with T-bar support grid.
- Secure fixture to grid in compliance with state and local codes.


INSTALLATION GUIDE

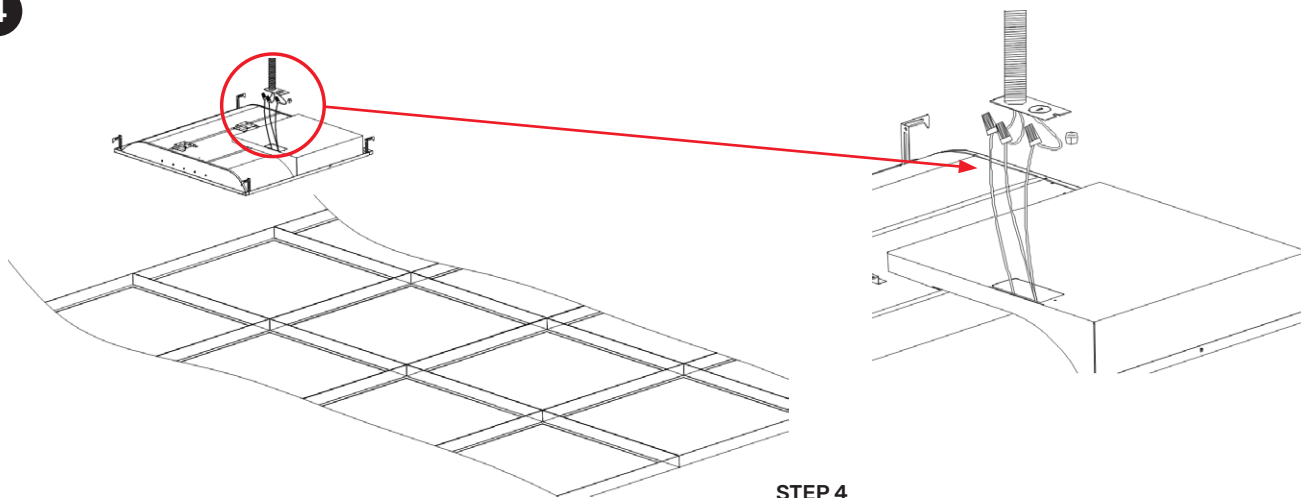4**STEP 4**

- Remove screw on driver wiring chamber and remove cover.
- Set screw and cover aside to be reinstalled later.
- Remove appropriate 1/2" knockout(s) to allow for entry of supply wiring into wiring chamber.
- Wire luminaire per "Wiring Diagram" section and push all leads into the junction box.

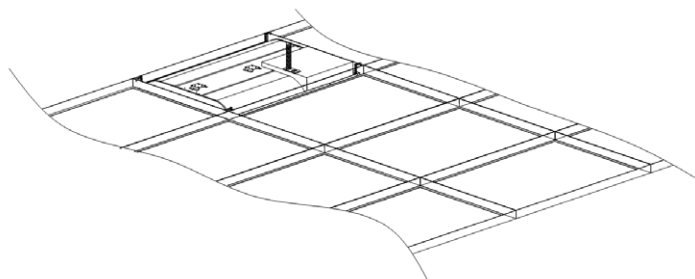5**STEP 5**

- Reattach cover of wiring chamber with the screw that was removed in Step 4 above.

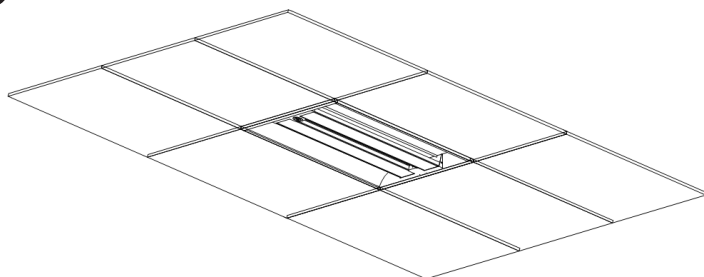6**STEP 6**


- Replace adjacent ceiling panel removed in Step 2.
- Installation completed.

INSTALLATION GUIDE

WIRING DIAGRAM

Make the following electrical connections:

- Connect the black fixture lead to the voltage supply Line position, Hot.
- Connect the white fixture lead to the neutral supply position.
- Connect the green or green/yellow ground lead to the supply ground lead.
- If 0/1-10V Dimming is used, connect the violet lead to the supply positive dimming lead and connect the gray or pink lead to the supply negative dimming lead. If dimming is not being used ensure to cap off the violet lead and gray or pink lead.
- To install a sensor, remove the sensor cover and insert it directly into the EZ-Connect™ receptacle. If sensor is not in use, ensure cover is on.

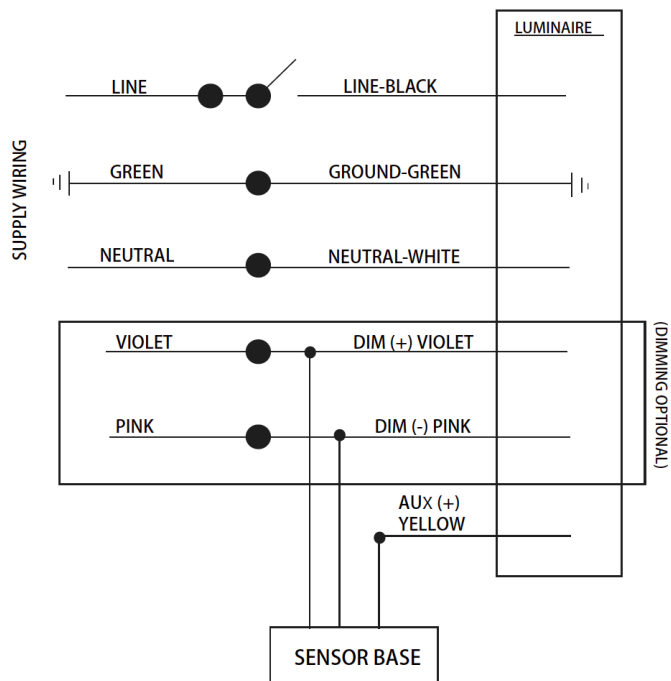

FCC NOTICE

CAUTION

- FCC Regulations state that any unauthorized changes or modifications to this equipment not expressly approved by the manufacturer could void the user's authorization to operate this equipment.
- The device is tested and found to comply with Part 15 of the FCC Rules. Operation is subject to two conditions: (1) This device may not cause harmful interference and, (2) this device must accept any interference received, including any interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules.
- These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.
- The equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.
- However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 1. Reorient or relocate the receiving antenna.
 2. Increase the separation between the equipment and receiver.
 3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 4. Consult the dealer or an experienced radio/TV technician for help.

Conforms to standard CAN-ICES 005(A)/NMB-005 (A)